


THE AR15 PIVOT PIN TOOL

CLICK. SNAP. DONE. FASTEST WAY TO INSTALL A PIVOT PIN.


How can such a small task cause such frustration? This brilliant little tool gives you a third hand to turn the fumble finger, pin launching, pain-in-the-neck task into a quick breeze. 1-2-3-4 done, it's that simple.

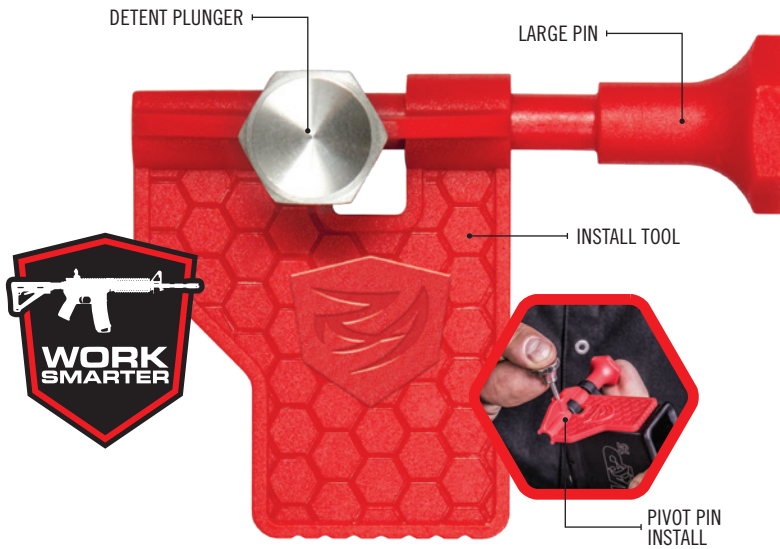


EASILY INSTALL THE PIVOT PIN IN LESS THAN 60 SECONDS.

AR15


MASTER GRADE BUILD TOOL

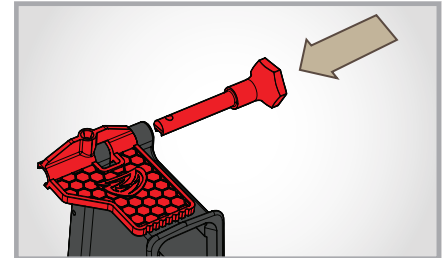


Step 1. Put the Pivot Pin Tool (PPT) fixture over the pin housing on the lower and insert large PPT pin.

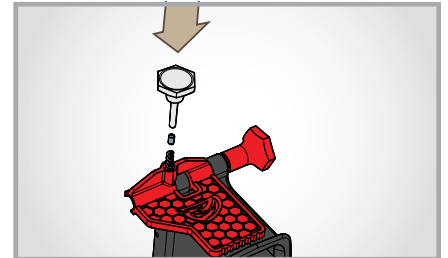

Step 2. Load spring first, then detent second into the PPT fixture. Compress the spring and detent with the PPT plunger and hold.

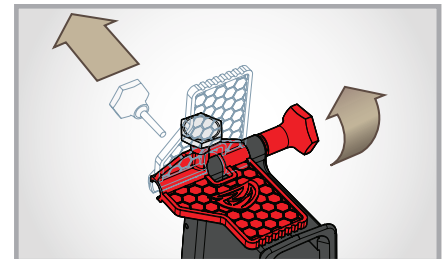

Step 3. Rotate the PPT assembly 90 degrees and then remove the plunger.

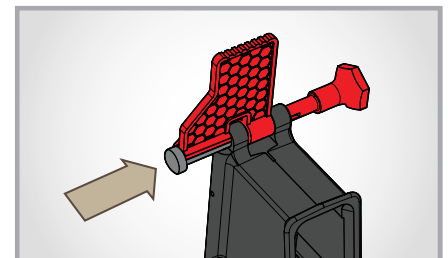

Step 4. Insert pivot pin as shown, then remove large PPT pin. Finally, remove PPT fixture and snap pivot pin into closed position.

⚠ WARNING: This product can expose you to chemicals including Nickel (Metallic), which is known to the state of California to cause cancer and birth defects or reproductive harm. For more information, go to www.P65Warnings.ca.gov.



5480 NATHAN LANE NORTH, SUITE 120
MINNEAPOLIS, MN 55442 800.286.0567
info@realavid.com | RealAvid.com
© 2020 REVO BRAND GROUP, LLC.

