GUN BOSS®- HANDGUN

Follow these simple steps when cleaning your handgun using the appropriate bore brushes, slotted bore patch tips, bore patch jags and patches included in the kit.


SAFETY FIRST

MAKE CERTAIN YOUR FIREARM IS UNLOADED: CHECK THE BREECH, INSPECT MAGAZINE OR CYLINDER. REMOVE MAGAZINE IF POSSIBLE. CLEAN FIREARMS IN A VENTILATED AREA.

CLEANING INSTRUCTIONS FOR .22 - .45 HANDGUNS:

NOTE: WHEN POSSIBLE. THE PREFERRED DIRECTION FOR ALL BORE CLEANING IS FROM ACTION TO MUZZLE.

STEP 1: Locate the rotating rod section and thread it into the T-handle. Connect the appropriate number of fixed rods to clean the full length of the handgun

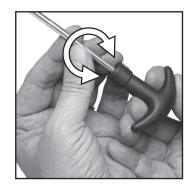

STEP 3: Remove the slotted bore patch tip or bore patch iag from the rod and attach the appropriate size bore brush to the rod. Push the brush through the bore from action to muzzle. This step loosens more fouling.



DEPENDING ON YOUR PREFERENCE FOR USING SLOTTED TIPS AND/OR JAGS, SELECT THE SIZE THAT CORRESPONDS TO THE CALIBER OF YOUR HANDGUN:

STEP 2 - SLOTTED BORE PATCH TIPS: Attach a slotted bore patch tip to the end of the assembled rod. Slide a cleaning patch through the slotted tip. Apply a generous amount of

gun solvent to the patch and push the patch through bore. This step moistens and begins to loosen fouling.



STEP 2 - BORE PATCH JAGS: Pierce the center of the cleaning patch with the tip of the bore patch jag and wrap


the patch around the jag. Apply a generous amount of gun solvent to the patch. Carefully guide the jag into the opening of the bore and push it the length of the bore using a consistent pressure. Extract the rod and dispose of the used patch. We do not recommend re-inserting the used patch multiple times. Use a fresh patch for each pass through the bore.



STEP 4: Re-attach the slotted bore patch tip or bore patch jag to the rod (along with a clean patch). Push the clean/dry patch through the bore from action to muzzle. The patch will absorb loosened fouling. Repeat steps 2 through 4 using multiple patches until last patch comes out clean.



STEP 5: Once the bore is clean, wipe down the action with a clean patch lightly coated in gun solvent to remove any stray fouling. Finally, wipe down action with clean dry patch to remove any excess solvent.

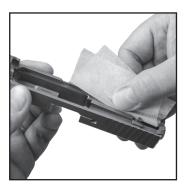

NOTE: After handling a firearm it is good practice to wipe down external metal components with a very light coat of CLP or gun oil to reduce oxidation. Wash your hands with soap after cleaning firearms to remove any lead residue.

TO FRIENDS AND CUSTOMERS: As the owners of Real Avid, authenticity isn't just a strategy here. It's a guiding philosophy. It arises out of our faith and personal relationships with Jesus Christ. We know that our creativity and success ultimately comes from Him. He cares about each of us and about our customers. We're not perfect, but we are committed to following Him in our personal and business lives.

We look forward to growing our relationship with you and continuing to earn our place.



Revo Brand Group, LLC 5480 Nathan Lane North, Suite 120 Minneapolis, MN 55442 USA